

PZ19 Series Digital Display AC Voltmeter

User's Manual

The manual is applied to the following models:

PZ194U-2X1/3X1/5X1/AX1/9X1

PZ194U-2K1/3K1/5K1/AK1/9K1

PZ194U-2X4/3X4/AX4/9X4

PZ194U-2K4/3K4/AK4/9K4

PZ194U-5XY1/AXY1/9XY1/9XY3/AXY3

PZ194U-5KY1/AKY1/9KY1/9KY3/AKY3

PZ194U-2S1/5S1/AS1/9S1/9S1J

PZ194U-5SY1/ASY1/9SY1

PZ194U-2S4/2S4T/AS4/9S4/9S4J/9S4T/9S4K

PZ194U-ASY3/9SY3

PZ194U-2D4/2D4T/9D4/9D4T

The logo for SFERE, consisting of the word "SFERE" in a bold, teal, sans-serif font.

Menu

1. Safety Instruction	1
2. Product instruction	1
2.1 Overview	1
2.2 Model selection	2
3. Installation and wiring	3
3.1 Outline dimension	3
3.2 Installation method.....	3
3.3 Wiring diagram	3
4. Operation	5
4.1 Panel instruction	5
4.2 Display.....	5
5. Setting	7
5.1 Reading mode	7
5.2 Programming mode	9
5.3 System setting.....	12
5.4 Input setting.....	12
5.5 Relay output setting.....	13
5.6 Analog output setting	14
5.7 Communication setting.....	15
6. Common problems and troubleshooting	16
6.1 About communication	16
6.2 Measured data is not correct.....	17
6.3 Meter does not work	17
6.4 Other phenomena	17
7. Technical specification	17
Appendix 1 Alarm items and units of relative alarm threshold	19
Appendix 2 Modbus-RTU Communication address information list	20

1. Safety Instruction

Thank you for choosing the meter researched and developed by Jiangsu Sfer Electric Co., Ltd. In order to ensure you to be convenient to purchase and use the meter safely, correctly and efficiently, please read this instruction carefully before using it, and make sure of paying attention to several points as follows:

- ◆ Make sure only the qualified technicians perform the installation and maintenance
- ◆ Before performing external or internal operation of the meter, make sure the input signal and power supply are switched off.
- ◆ The proper voltage detect device shall always be used to check there is no voltage in every part of meter.
- ◆ The electrical parameter supplied to the meter should be within the rated range.

The following conditions may result in damage or abnormal operation to the device

- ◆ The voltage of auxiliary power supply goes beyond the range;
- ◆ The frequency of power grid goes beyond rated range
- ◆ Connecting terminal wires without following the requirements.

2. Product instruction

2.1 Overview

This series digital display voltmeters are used to measure single phase or three phase AC voltage in low voltage distribution system. They are equipped with analog output, relay output, digital input and communication supporting Modbus-RTU protocol. Their transmitting ratio also can be changed through programming. There are different choices of outline size for this kind of meters. So they are suitable to replace analog pointer voltmeters.

This series digital display AC voltmeters have high environment adaptability because their working temperature range is -40~70°C and EMC better than III level. They can be applied in control systems, distribution automation systems, industrial automation systems and intelligent buildings.

PZ194U-□X□: Measurement

PZ194U-□K□: Measurement & communication & analog output

PZ194U-□S□: Measurement & communication & digital input & relay output & analog output (optional)

PZ194U-□D□: Measurement & communication & analog output

2.2 Model selection

Model	Phase	Display	Communication	Analog output	Digital input	Relay output	□ outline code				
							2	3	5	9	A
PZ194U-□X1	single phase	LED	-	-	-	-	■	■	■	■	■
PZ194U-□XY1	single phase	LCD					-	-	■	■	■
PZ194U-□X4	three phase	LED	-	-	-	-	■	■	-	■	■
PZ194U-□XY3		LCD					-	-	-	■	■
PZ194U-□K1	single phase	LED	1	1	-	-	■	■	■	■	■
PZ194U-□KY1		LCD					-	-	■	■	■
PZ194U-□K4	three phase	LED	1	1	-	-	■	■	-	■	■
PZ194U-□KY3		LCD					-	-	-	■	■
PZ194U-□D4(T)	three phase	LED	1	3	-	-	■	-	-	■	-
PZ194U-□S1	single phase	LED	1	-	4	2	■	-	■	■	■
PZ194U-9S1J		LED			-		-	-	■	-	
PZ194U-□SY1		LCD			4		-	-	■	■	■

PZ194U-□S4	LED	1	-	4	3	■	-	-	■	■
PZ194U-9S4J	LED			4	3	-	-	-	■	-
PZ194U-9S4T	LED			4	3	-	-	-	■	-
PZ194U-9S4K	LED			4	-	-	-	-	■	-
PZ194U-□SY3	LCD			4	3	-	-	-	■	■

Note:

- AS4,AS1,ASY3 and ASY1 only have 2 digital inputs and 2 relay outputs;
- Numbers in the blank indicate channels of corresponding functions;
- means the corresponding outline is available.

3. Installation and wiring


3.1 Outline dimension

Outline code	Pointer meter model	Panel (mm ²)	Cut-out (mm ²)	Installation depth (mm)
2	42 square type	120×120	111×111	55.5/76
3	6 square type	83×83	76×76	75
9	9 square type	96×96	91×91	75/98
A	61 square type	74×74	67×67	75/90
5	5 slot type	96×48	91×44	68.5/82


3.2 Installation method

- On the fixed distribution electric cabinet, choose a suitable place for cutout by size of cut-out;
- Take off the fixed clip of meter.
- Insert the meter into the cutout.
- Push the fixed clip to fix the meter.

3.3 Wiring diagram

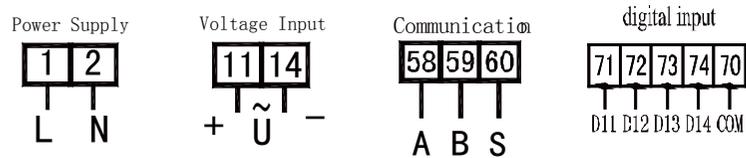

AC, DC 80~270V

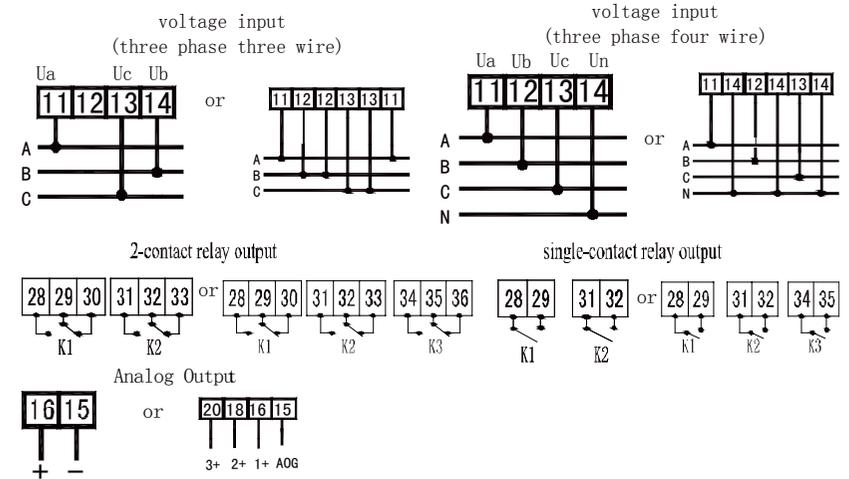


Note: upper diagram is for the meters with all functions. If a meter only has some of the functions shown in upper diagram, please refer to the wiring diagram on the case of that meter.

Wiring instruction:

- Voltage input: make sure that input voltage is not larger than rated voltage, otherwise, please connect PT to meter. For user's convenience, please adopt wiring terminal row.
- Make sure voltage of three phases corresponding to each other, that means the phase sequence and direction are same.
- The actual wiring method should be the same with the inner wiring method of the meter.
- Power supply: AC/DC (80~270)V. User can choose fuse with max. rated current 0.25A.
- In three phase three wire mode, connect terminal 11 to phase A, connect terminal 13 to phase C, and connect terminal 14 to phase B.

4. Operation

4.1 Panel instruction

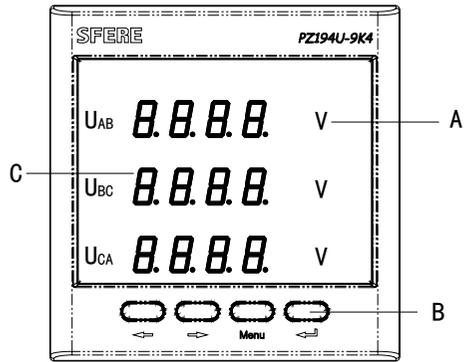

PZ194U-9K4 panel

- A: Unit and signs
- B: Button
- C: Measured value display

4.2 Display

Measurement display interfaces show measured data of voltage, frequency, digital input and relay output. User can press \leftarrow or \rightarrow button to switch between different interfaces in a cyclic order. If user presses \leftarrow or \rightarrow button to check frequency interface, and then presses \leftarrow button, user can check phase voltage and line voltage.

Main measurement display interfaces are as follows:

Single phase voltmeter	Three phase voltmeter	Instruction
		Voltage display interface In single phase voltmeter: $U=380.0V$; In three phase ampere meter: $U_a=5.002kV$, $U_b=5.003kV$, $U_c=5.001kV$

		Press \leftarrow or \rightarrow button to switch to digital input interface.
		Press \leftarrow or \rightarrow button to switch to relay output interface.
		$F=50.00Hz$. Press \leftarrow or \rightarrow button to check frequency data. In left two pictures, $F=50.00Hz$.

Notice:

If some information does not exist or relative information does not work, it means that meter does not have relative function.

5. Setting

There are reading and programming modes in the meter.

5.1 Reading mode

In measurement display interface, keep pressing Menu button for more than three seconds until **rERd** appears, then press **←** button to enter system parameter checking interface. In this interface, the parameters only can be read.

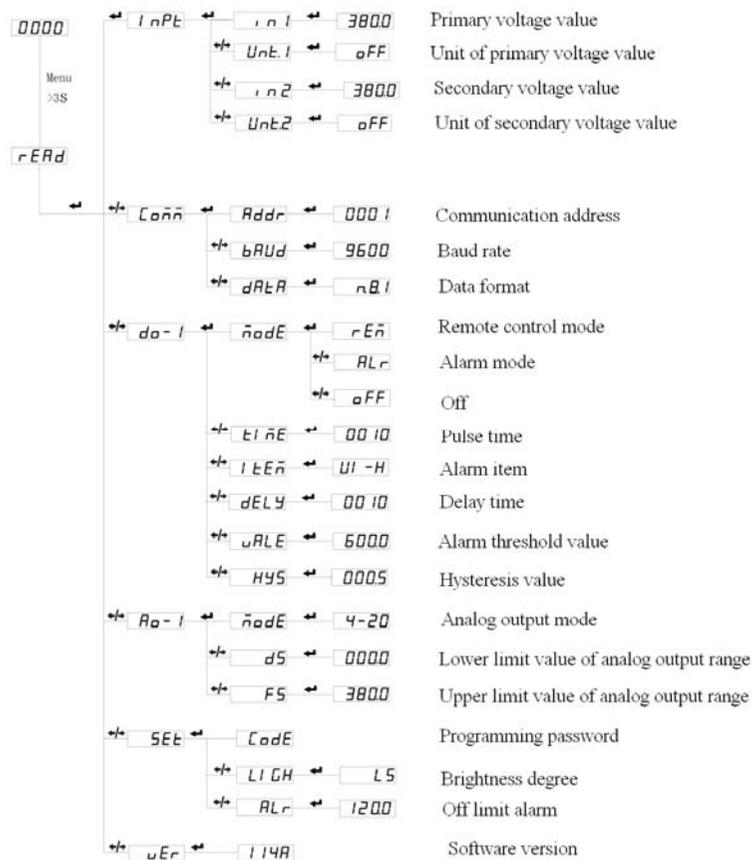


Figure 1. System parameter checking interface of single phase voltmeter

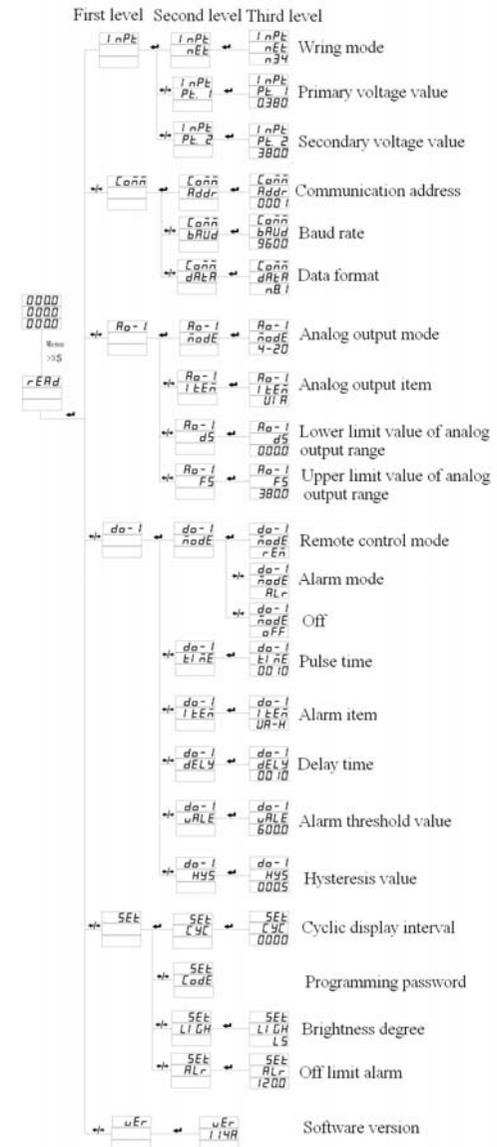



Figure 2 System parameter checking interface of three phase voltmeter

Note: display interfaces are slightly different in different models of meters.


5.2 Programming mode

In measurement display interface, keep pressing Menu button for more than three seconds until **rEAd** appears, then press **←** or **→** button to switch to **ProG**. Now press **↵** button to enter program password interface. Press **←** or **→** button to input password (defaulted 0001), and then press **↵** button to enter setting menu. (Note: if the password is not right, **Err** will appear. Then it returns to program password interface after seven seconds.)

The method of entering setting menu of three phase voltmeter is as follows:



The method of entering setting menu of single phase voltmeter is as follows:



If the parameters of third level data are modified, please press **↵** button to save the modified data and return to secondary level. If user press Menu button, the modified data will not be saved.

If user wants to exit program setting interface, please return to first level of program setting interface, then press Menu button to see **SAvE--no**, now there are two choices available:

- Press **↵** button to exit program setting interface without saving modified data;
- Press **←** or **→** button to switch to **SAvE--YES**, then press **↵** button to exit program setting interface and save modified data.

The method of saving modified data and exiting setting interface of three phase voltmeter is as follows:



The method of saving modified data and exiting setting interface of single phase voltmeter is as follows:



Setting menu instruction:

First level		Second level		Third level		
Letter	Instruction	Letter	Instruction	Letter/number	Instruction	
InPt	Single Phase	In 1	Primary value of voltage	0000-9999	0~9999	
		Unit. 1	Primary unit of voltage	oFF or on	Unit oFF means V on means kV	
		In 2	Secondary value of voltage	0000-9999	0~9999	
		Unit. 2	Secondary unit of voltage	oFF or on	Unit (User can not set this) oFF means V on means mV	
		Input three phase	Pt. 1	Primary value of voltage	0000-9999	Unit kV
			Pt. 2	Secondary value of voltage	0000-9999	Unit V
	nEt		Wiring mode	n34	three phase three wire	
				n33	three phase four wire	
	Com1	Communication	Addr	Meter address	0001~0247	1~247
			baud	Baud rate	2400~9600	2400、4800、9600bps
dAtE			Data format	nB.1	No check one stop bit	
				nB.2	No check, two stop bits	
				oB.1	Odd check, one stop bit	
	EB.1	Even check, one stop bit				
da-1	Alarm	nodE	Relay mode	ALr	Alarm	

do-2	setting			reñ	Remote control
				OFF	Off
		tlñE	Relay pulse time	0000~9999	Unit 0.1s
		lEEñ	Alarm item	F--H,dl IH etc.	See alarm item setting
		dELY	Relay delay	0000~9999	Unit 0.1s
		uAL	Alarm limit value	0000~9999	Set off limit alarm value (secondary value)
		HYS	Hysteresis value	0000~9999	Set hysteresis value (secondary value)
Ao-1	Analog output setting	lEEñ	Analog output item	UA,IA etc.	see analog output item setting
		dS	Lower limit value of analog output	0000~9999	$0 \leq DS \leq 0.5 * a$ a: secondary rated value $(FS-DS) \geq 500$
		FS	Upper limit value of analog output	0000~9999	$0.5 * a \leq FS \leq 1.2 * a$ a: secondary rated value $(FS-DS) \geq 500$
SEt	System parameter	CYC	Cyclic display period	0000~9999	0~60s
		Code	Password	0000~9999	Setting password
		LIGH	Brightness	L1~L5	L1~L5, lower to higher brightness degree
		ALr	Flashing alarm	0000~1200	Flashing alarm range is between 30.0 and 120.0% of rated value. 0.0% means this function is off.


5.3 System setting

E.g. set password to be 2, change cyclic display period to be 3s, choose brightness degree to be L5, and select flashing alarm value to be more than 120% of rated value.

Enter setting interface, press \leftarrow or \rightarrow button to select **SEt**, then press \leftarrow button to enter system setting menu. Now press \leftarrow or \rightarrow button again to select specific items and press \leftarrow button again.

※Set password

Single phase voltmeter:




Three phase voltmeter:




※Choose brightness degree

Single phase voltmeter:



Three phase voltmeter:




※Change cyclic display period

Three phase voltmeter:



※Select flashing alarm value

Single phase voltmeter:




Three phase voltmeter:





5.4 Input setting

User can change input signal according to actual situation in field. Unit of primary value is V. E.g. set input signal as AC380V/380V (user can not change secondary value 380V). First enter setting menu, second press \leftarrow or \rightarrow button to select **INPt**, third press \leftarrow button to enter input signal setting menu. Now press \leftarrow or \rightarrow button again to select specific items and press \leftarrow button again.

Three phase voltmeter:



Single phase voltmeter:

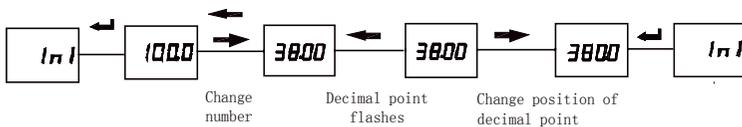


5.5 Relay output setting

User can change first relay from off to alarm mode, alarm activates after 5 seconds when Phase A voltage is lower than 300V with hysteresis value of 0.5V. First enter setting interface, second press \leftarrow or \rightarrow button to select $\overline{do-1}$, third press \leftarrow button to enter relay output setting menu. Now press \leftarrow or \rightarrow button again to select specific items and press \leftarrow button again.

※Set alarm mode

Single phase voltmeter:




Three phase voltmeter:




※Set alarm item

Single phase voltmeter:



Three phase voltmeter:



※Set alarm voltage value

Single phase voltmeter:




Three phase voltmeter:




※Set relay delay time

Single phase voltmeter:



Three phase voltmeter:



※Set hysteresis value

Single phase voltmeter:




Three phase voltmeter:




User can change second relay from off to remote control mode, and set remote control pulse time to be 5 seconds. First enter setting interface, second press \leftarrow or \rightarrow button to select $\overline{do-2}$, third press \leftarrow button to enter relay output setting menu. Now press \leftarrow or \rightarrow button again to select specific items and press \leftarrow button again.

※Set remote control mode

Single phase voltmeter:



Three phase voltmeter:




※Set relay pulse time

Single phase voltmeter:



Three phase voltmeter:




5.6 Analog output setting

E.g. set first analog output as phase A voltage 0~380V corresponds to 4~20mA output. First enter setting menu, second press \leftarrow or \rightarrow button to select $\overline{Ao-1}$, third press \leftarrow button to enter analog output setting menu. Now press \leftarrow or \rightarrow button again to select specific item and press \leftarrow button again.

※Analog output item

Three phase voltmeter:



※Set lower limit value of analog output

Single phase voltmeter:

Three phase voltmeter:



※Set upper limit value of analog output

Single phase voltmeter:

Three phase voltmeter:



Note: 1) User can not set analog output mode such as 4~20mA;
2) Analog output item of single phase voltmeter is defaulted to be voltage. User can not change it.

5.7 Communication setting

E.g. set communication address to be 3, select baud rate as 9600bps, choose data format as no check mode. First enter setting menu, second press ← or → button to select **Coññ**, third press ↵ button to enter communication menu. Now press ← or → button to select specific items and press ↵ button again.

※Set communication address

Single phase voltmeter:

Three phase voltmeter:



※Set data format

Single phase voltmeter:

Three phase voltmeter:



※Set baud rate

Single phase voltmeter:

Three phase voltmeter:



6. Common problems and troubleshooting

6.1 About communication

The meter does not send data back

First make sure the communication setting information of the meter such as subordinate machine address, baud rate and check mode corresponds to the requirements of host computer. If several meters on spot do not send data back, please check whether the communication bus on spot is connected correctly and whether RS485 converter working normally.

If there is only one meter or a few meters communicate abnormally, related communication bus is also needed to be checked. You may check whether there is an error in the host computer by exchanging the subordinate machine addresses of normal meter and abnormal meter. Besides you may check whether there is a fault in the meter by exchanging the installation positions of normal and abnormal meters.

The data sent back by the meter is incorrect

Communication data which is opened to users includes primary grid float type data and secondary grid int/long type data. Please read the instruction for data storage address and format in communication address table carefully, and make sure to transmit data according to relative format.

It is suggested to download testing software MODSCAN32 for checking MODBUS-RTU communication protocol from our homepage. This software adopts standard MODBUS-RTU protocol which can display data in the formats such as integer, float and hexadecimal, so that you can compare the data with measured data displayed on the meter directly.

Communication indication sign

There is a communication indication sign in the display interface of meters. If a meter receives communication data during communication test process, this communication sign will flash.

6.2 Measured data is not correct

First make sure that the meter has been input right voltage. The multimeter is used for measuring voltage. Electric quantity displayed on the meter is the value of primary grid; it may lead to wrong electric quantity display if the ratio of voltage transformer does not conform to that of transformer in-service. The defaulted voltage range is not allowed to be modified after delivery. Connection network is available to be modified according to actual connection on spot, but the connection mode set in programming shall correspond with the actual connection method, otherwise it may lead to wrong display.

6.3 Meter does not work

Ensure proper auxiliary supply (AC/DC80-270V) is linked to the auxiliary supply terminal. As the meter may be damaged by auxiliary supply voltage which is beyond rated range and can not recovery. Use multi-meter to measure the voltage of auxiliary supply, if the meter does not display when the voltage is proper, please electrify again.

6.4 Other phenomena

Please contact our technical service department to give a detailed description of the field condition. Our technicians will analyze possible causes according to your description. The company will appoint technicians to deal with problems on spot as soon as possible if the problem can not be settled after oral communication.

7. Technical specification

Electrical feature		
Accuracy	0.5%(defaulted)、0.2%	
Display mode	LED or LCD	
Data refresh rate	1s	
Input	Rated value	AC 100V, 220V, 380V
	Overload	continuous 1.2Un
	Frequency	45~65Hz

Power supply	Working range	AC 80~270V 50/60Hz, DC 80~270V
	Consumption	≤5VA
Digital input		Dry contact mode
Relay output		Contact capacity (resistive): AC 5A/250V, DC 5A/30V
Analog output	Current output	DC 4~20mA, 0~20mA, 0~5mA etc., If 4~20mA or 0~20mA, load≤350Ω If 0~5mA, load≤1 kΩ
	Voltage output	DC 0~5V, 1~5V, 0~10V etc., load≥20kΩ
Communication		RS485 interface, Modbus-RTU protocol, baud rate 2400~9600bps
Environment		
Working temperature		LED:-40~70℃ LCD:-25~70℃
Storage temperature		-40~85℃
Relative humidity		≤93%RH
Pollution degree		2
Measurement type		CAT III
Insulating ability		Between power and input or output≥AC2kV, Between input and output≥AC1kV
Altitude		2500m
EMC		
Electrostatic discharge surge immunity		IEC 61000-4-2-III class
Radiated, radio-frequency, electromagnetic field immunity		IEC 61000-4-3-III class
Electrical fast transient/burst immunity		IEC 61000-4-4-IV class
Surge immunity		IEC 61000-4-5-IV class
Immunity to conducted disturbances, induced by radio-frequency fields		IEC 61000-4-6-III class
Power frequency magnetic field immunity		IEC 61000-4-8-III class
Voltage dips, short interruptions and voltage variations immunity		IEC 61000-4-11-III class

Appendix 1 Alarm items and units of relative alarm threshold

Three phase voltmeter

No.	Alarm item	Unit of alarm value
0	UA-H (Phase A high voltage alarm)	0.1 V
1	UA-L (Phase A low voltage alarm)	
2	Ub-H (Phase B high voltage alarm)	
3	Ub-L (Phase B low voltage alarm)	
4	UC-H (Phase C high voltage alarm)	
5	UC-L (Phase C low voltage alarm)	
6	3U-H (One of three phases high voltage alarm)	
7	3U-L (One of three phases low voltage alarm)	0.01Hz
8	F -H (High frequency alarm)	
9	F -L (Low frequency alarm)	Alarm value is not needed to be set in relay linkage mode.
10	dl1.H (Relay activates when first digital input conducts.)	
11	dl1.L (Relay activates when first digital input opens.)	
12	dl2.H (Relay activates when second digital input conducts.)	
13	dl2.L (Relay activates when second digital input opens.)	
14	dl3.H (Relay activates when third digital input conducts.)	
15	dl3.L (Relay activates when third digital input opens.)	
16	dl4.H (Relay activates when fourth digital input conducts.)	
17	dl4.L (Relay activates when fourth digital input opens.)	

Single phase voltmeter

No.	Alarm item	Unit of alarm value
0	U--H (Phase A high voltage alarm)	0.1 V
1	U--L (Phase A low voltage alarm)	
2	F -H (High frequency alarm)	0.01Hz
3	F -L (Low frequency alarm)	

4	dl1.H (Relay activates when first digital input conducts.)	Alarm value is not needed to be set in relay linkage mode.
5	dl1.L (Relay activates when first digital input opens.)	
6	dl2.H (Relay activates when second digital input conducts.)	
7	dl2.L (Relay activates when second digital input opens.)	
8	dl3.H (Relay activates when third digital input conducts.)	
9	dl3.L (Relay activates when third digital input opens.)	
10	dl4.H (Relay activates when fourth digital input conducts.)	
11	dl4.L (Relay activates when fourth digital input opens.)	

Appendix 2 Modbus-RTU Communication address information list

◆ Read grid data through function code 0x03/0x04

Address	Format	Data instruction	Unit	R/W
Primary grid data				
0x06	float	Phase A voltage	V	R
0x08	float	Phase B voltage	V	R
0x0A	float	Phase C voltage	V	R
0x0C	float	line voltage	V	R
0x0E	float	line voltage	V	R
0x10	float	line voltage	V	R
0x12 ~ 0x2A	float	Reserved		
0x2C	float	Frequency	Hz	R
0x2E	float	Reserved		
0x30	float	Average value of three phase voltages	V	R
0x32	float	Average of three line voltages	V	R
Secondary grid data				

Address	Format	Data instruction	Proportion	R/W
0x100~0x101	Bit[32]	Relay output status Bit[0]-Bit[2]	0: open 1: activate	R
0x102~0x103	Bit[32]	Digital input status Bit[0]-Bit[3]	0: open 1: closed	R
0x104~0x105	int	Reserved		
0x106	int	Phase A voltage	0.1V	R
0x107	int	Phase B voltage	0.1V	R
0x108	int	Phase C voltage	0.1V	R
0x109	int	line voltage	0.1V	R
0x10A	int	line voltage	0.1V	R
0x10B	int	line voltage	0.1V	R
0x10C~0x11F	int	Reserved		
0x120	int	Frequency	0.01Hz	R

◆ Read status information of relay through function code 0x01, and control relay through function code 0x05, 0x0F.

Address	Format	Data content	Data instruction	R/W
0000 (fixed address)	Bit	First relay	0:off 1:closed	R/W
	Bit	Second relay	0:off 1:closed	R/W
	Bit	Third relay	0:off 1:closed	R/W

◆ Remotely control relay through function code 0x05, 0x0F

Address	Format	Data content	Data instruction	R/W
0000	Bit	First relay	0:off 1:closed	R/W
0001	Bit	Second relay	0:off 1:closed	R/W
0002	Bit	Third relay	0:off 1:closed	R/W

◆ Read status of digital input through function code 0x02

Address	Format	Data content	Data instruction	R/W
0000 (fixed address)	Bit	First digital input	0:off 1:closed	R
	Bit	Second digital input	0:off 1:closed	R
	Bit	Third digital input	0:off 1:closed	R
	Bit	Fourth digital input	0:off 1:closed	R

Modbus-RTU message format instruction

Read the status of relay output (Function code 0x01)

	Frame structure	Address code	Function code	data code		CRC check code
				initial relay address	Number of relay	
Host request	Byte	1 byte	1 byte	2 bytes	2 bytes	2 bytes
	Data range	1~247	0x01	0x0000 (fixed)	0x0001~0x0004	CRC16
	Message example	<u>0x01</u>	<u>0x01</u>	<u>0x00 0x00</u>	<u>0x00 0x02</u>	<u>0xBD 0xCB</u>
slave response	frame structure	address code	function code	data code		CRC check code
	Byte	1 byte	1 byte	byte of register	register value	2 bytes
	Message example	<u>0x01</u>	<u>0x01</u>	<u>0x01</u>	<u>0x03</u>	<u>0x11 0x89</u>

Remark: the register value in the slave response indicates the state of the relay. Beginning from the lowest bit of the byte, each number corresponds to the state of a loop of relay output. "1" indicates the relay is closed, while "0" indicates the relay is cut off. In the upper list, the register value "0x03" corresponds to "0000 0011" in binary system which means the first and second loop of relays are closed.

Read the state of digital input (Function code 0x02)

	Frame structure	address code	function code	data code		CRC check code
				initial switch address	number of switches	
Host request	Byte	1 byte	1 byte	2 bytes	2 bytes	2 bytes
	Data range	1~247	0x02	0x0000	0x0001~0x000C	CRC16
	Message example	<u>0x01</u>	<u>0x02</u>	<u>0x00 0x00</u>	<u>0x00 0x04</u>	<u>0x79 0xC9</u>
Slave response	Data structure	address data	function code	data code		CRC check code
				byte of register	register value	
	Byte	1 byte	1 byte	1 byte	1 byte	2 bytes
	Message example	<u>0x01</u>	<u>0x02</u>	<u>0x01</u>	<u>0x02</u>	<u>0x20 0x49</u>

Remark: the register value in the slave response indicates the state of digital input. Beginning from the lowest bit of the byte, each number corresponds to the state of a loop of digital input. "1" indicates the switch is closed, while "0" indicates the switch is cut off. In the upper list the register value "0x02" is "0000 0010" in binary system which means second loop of digital input is closed.

Read data register value (function code 0x03/0x04)

	Frame structure	address code	function code	data code		CRC check code
				initial register address	number of register	
Host request	Byte	1 byte	1 byte	2 bytes	2 bytes	2 bytes
	data range	1~247	0x03/0x04		max 48	CRC16
	message example	<u>0x01</u>	<u>0x03</u>	<u>0x00 0x06</u>	<u>0x00 0x06</u>	<u>0xE4 0x36</u>
Slave response	frame structure	address code	function code	data code		CRC check code
				byte of register	register value	
	byte	1 byte	1 byte	1 byte	12 bytes	2 bytes
	message example	<u>0x01</u>	<u>0x03</u>	<u>0x0C</u>	<u>(12-byte data)</u>	<u>(CRC16)</u>

Remark: the initial register address in host inquiry is the initial address of the data collected from primary grid or secondary grid. The number of register indicates the length of the data. In the upper list

the register address "0x00 0x06" indicates the initial address of phase voltage float data of three phases, and the number of register "0x00 0x06" indicates the length of the data includes three Word data and three float data. Please refer to appendix 1 MODBUS-RTU communication address information table.

Remotely-control single relay output (function code 0x05)

	frame structure	address code	function code	data code		CRC check code
				initial relay address	relay action value	
host request	byte	1 byte	1 byte	2 bytes	2 bytes	2 bytes
	data range	1~247	0x05	0x0000~0x0003	0xFF00/0x0000	CRC16
	message example	<u>0x01</u>	<u>0x05</u>	<u>0x00 0x00</u>	<u>0xFF 0x00</u>	<u>0x8C 0x3A</u>
slave response	frame structure	address code	function code	data code		CRC check code
				initial relay address	relay action value	
	byte	1 byte	1 byte	2 bytes	2 bytes	2 bytes
	message example	<u>0x01</u>	<u>0x05</u>	<u>0x00 0x00</u>	<u>0xFF 0x00</u>	<u>0x8C 0x3A</u>

Remark: in host request, the relay action value "0xFF00" indicates the relay is closed, while "0x0000" indicates the relay is cut off. If you want to perform remotely control, please make sure the relay is working in "remotely control" mode.

Remotely-control multi-relay output (function code 0x0F)

	frame structure	address code	function code	data code				CRC check code
				initial relay address	number of relay	number of data byte	relay action value	
host request	byte	1 byte	1 byte	2 bytes	2 bytes	1 byte	1 byte	2 bytes
	data range	1~247	0x0F	0x0000	0x0001~0x0004	0x01		CRC16
	message example	<u>0x01</u>	<u>0x0F</u>	<u>0x00</u> <u>0x00</u>	<u>0x00 0x03</u>	<u>0x01</u>	<u>0x07</u>	<u>0xCE 0x95</u>
slave response	frame structure	address code	function code	data code				CRC check code
	byte	1 byte	1byte	2bytes		2bytes		2 bytes
	message example	<u>0x01</u>	<u>0x0F</u>	<u>0x00 0x00</u>		<u>0x00 0x03</u>		<u>0x15 0xCA</u>

Remark: in the host inquiry, beginning from the lowest bit of relay action value, each bit corresponds to a loop of relay output. "1" indicates the relay is closed, while "0" indicates the relay is cut off. In the upper list, relay action value "0x07" is "0000 0111" in binary system, which means the first, second and third loops of relay are closed.



The information in this document is subject to change without further notice.

JIANGSU SFERE ELECTRIC CO., LTD

Add: 1 Dongding R., Jiangyin, Jiangsu, China.

P.C: 214437

Tel: +86-510-86199063 +86-510-86199069 +86-510-86199073

Email: export@sfere-elec.com

Website: www.sfere-elecnova.com